 


 
 
 
 
 
 
 
 

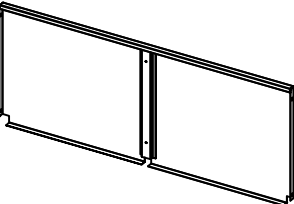 

 
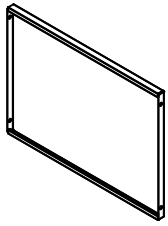 






Manual for
452.04053/
452.04058


STEEL**EN**
METAL DESIGN & EQUIPMENT

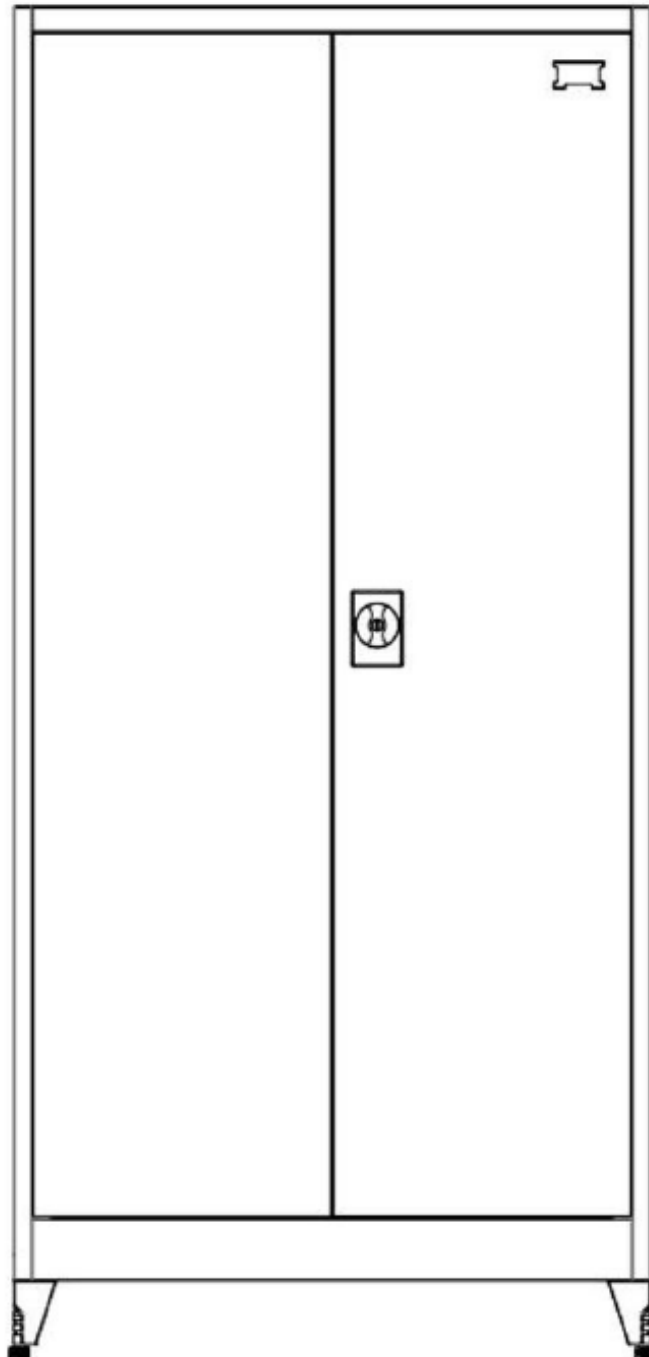



Tips:

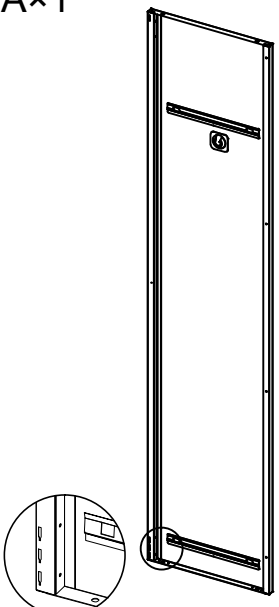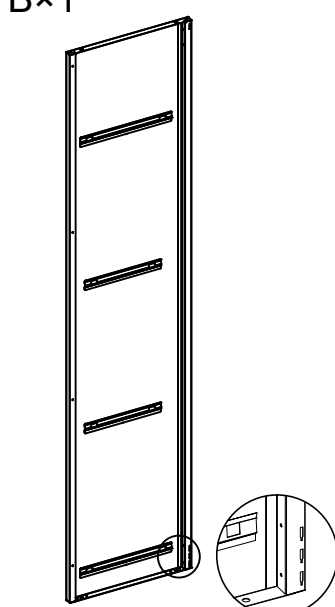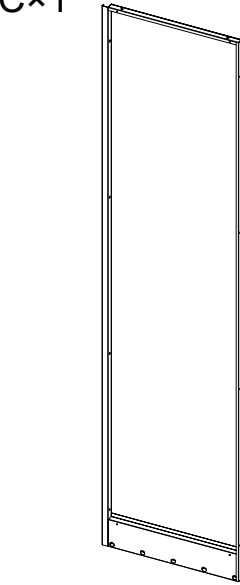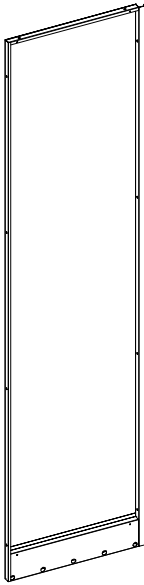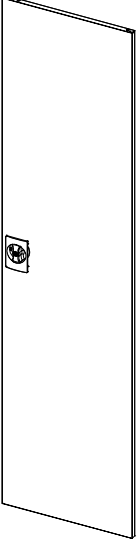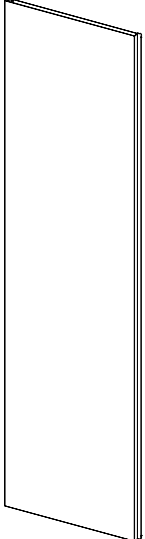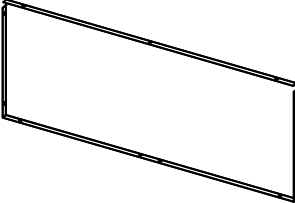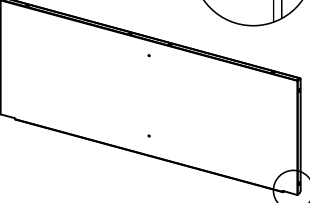   - 1.Avoid bumping and destroying the surface layer when using.
- 2.Avoid violent opening and closing of doors or drawers.
- 3.Wipe with a soft cotton (dip with water if necessary), and do not use acid or alkaline detergents for cleaning.

A×1 		B×1 		C×1 	D×1 			
E×1 		F×1 		G×1 	H×1 			
				K×1 	L×1 			
I×1 		J×1 		M×2 				
	N×51 	O×4 	P×4 	Q×1 	R×2 	U×2 Standby Application 		


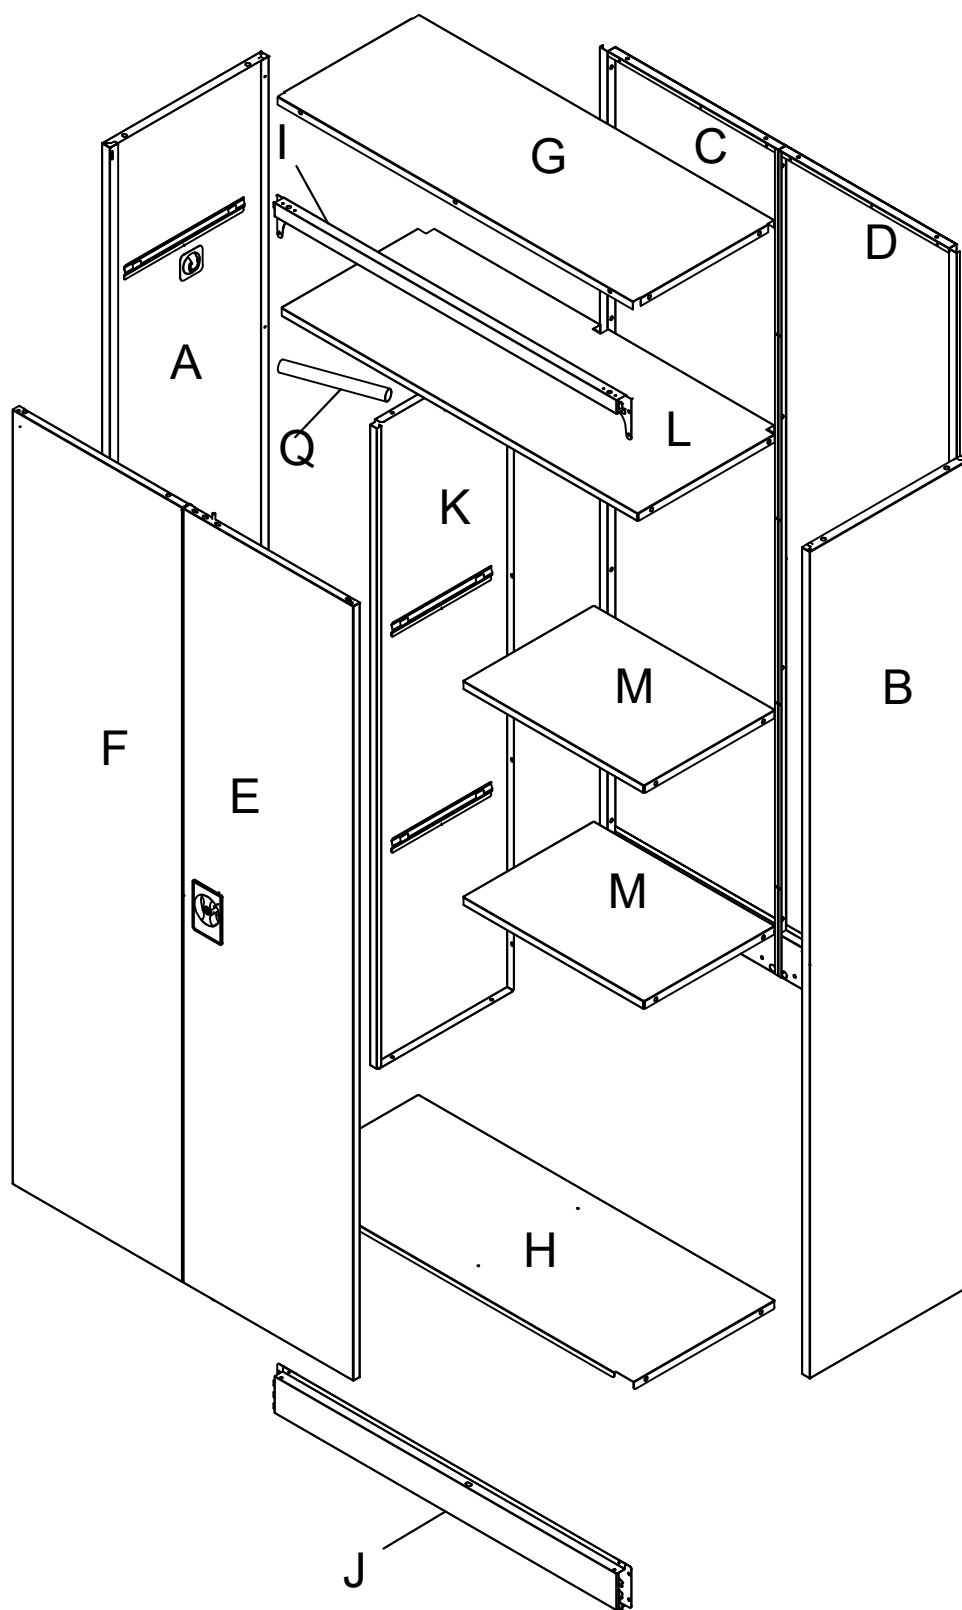 


1

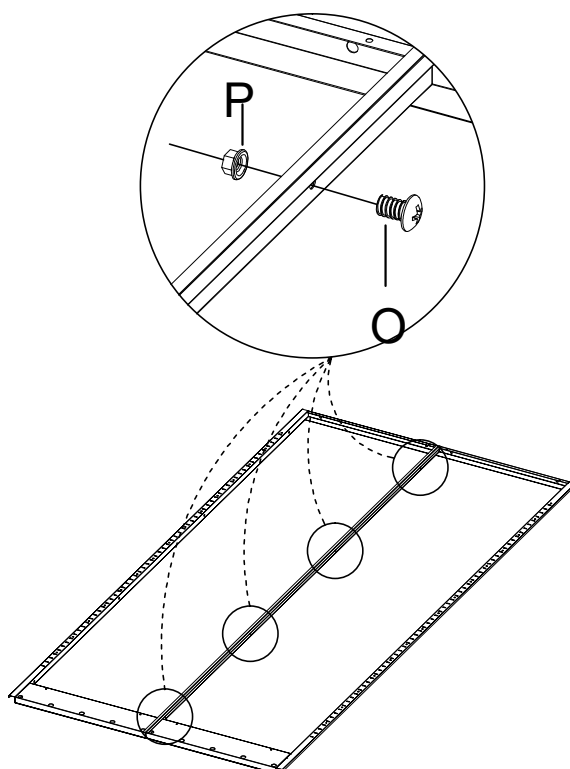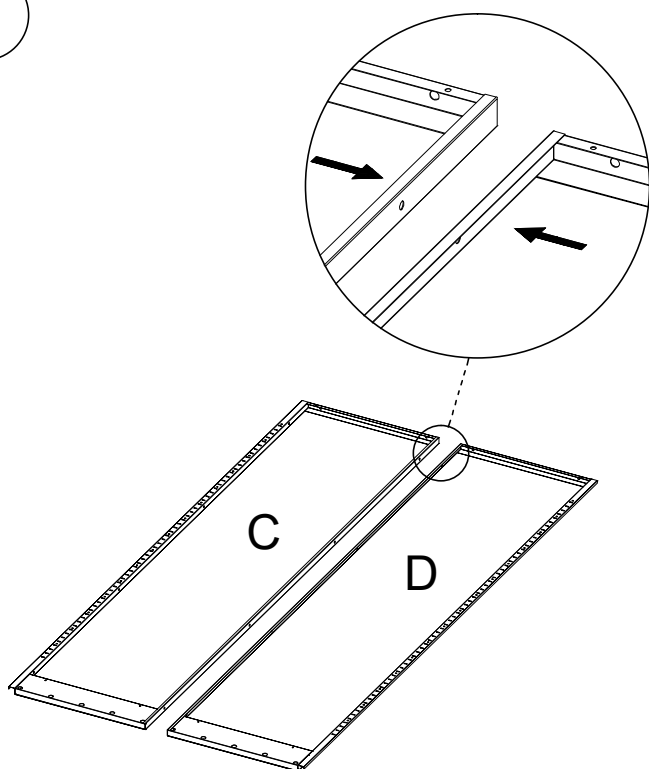  


O×4 P×4

  2

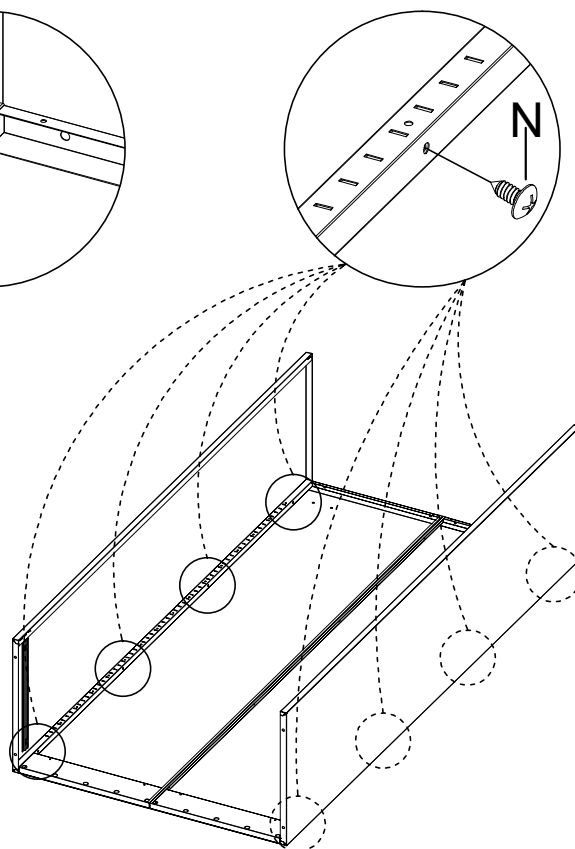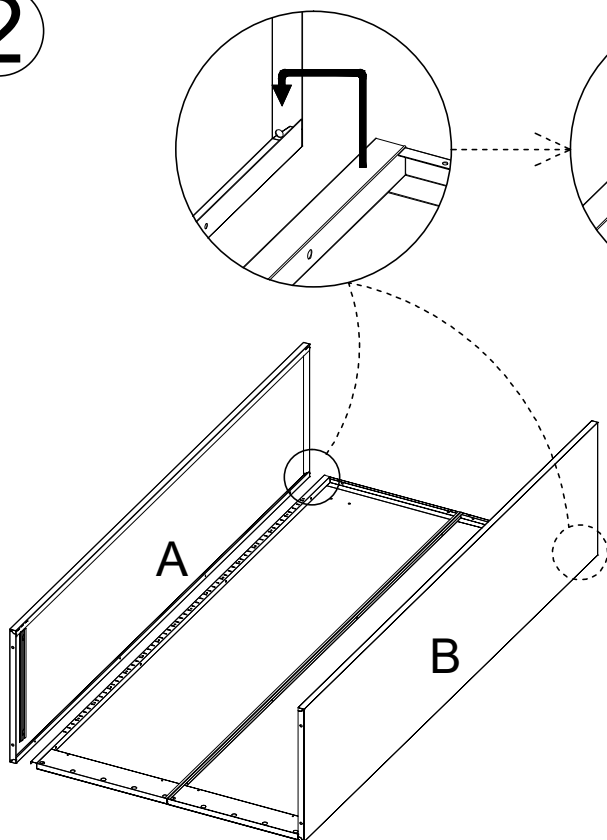


N×8

 3

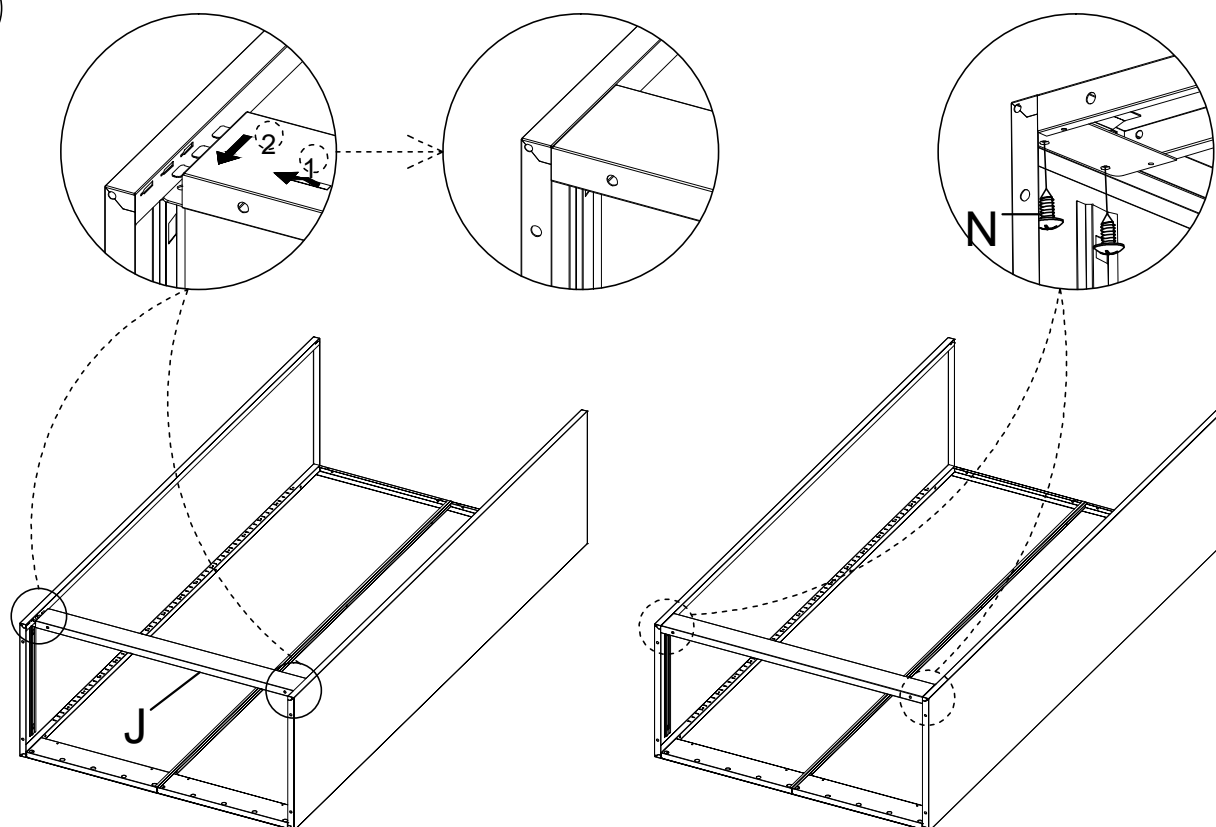


N×4

 4

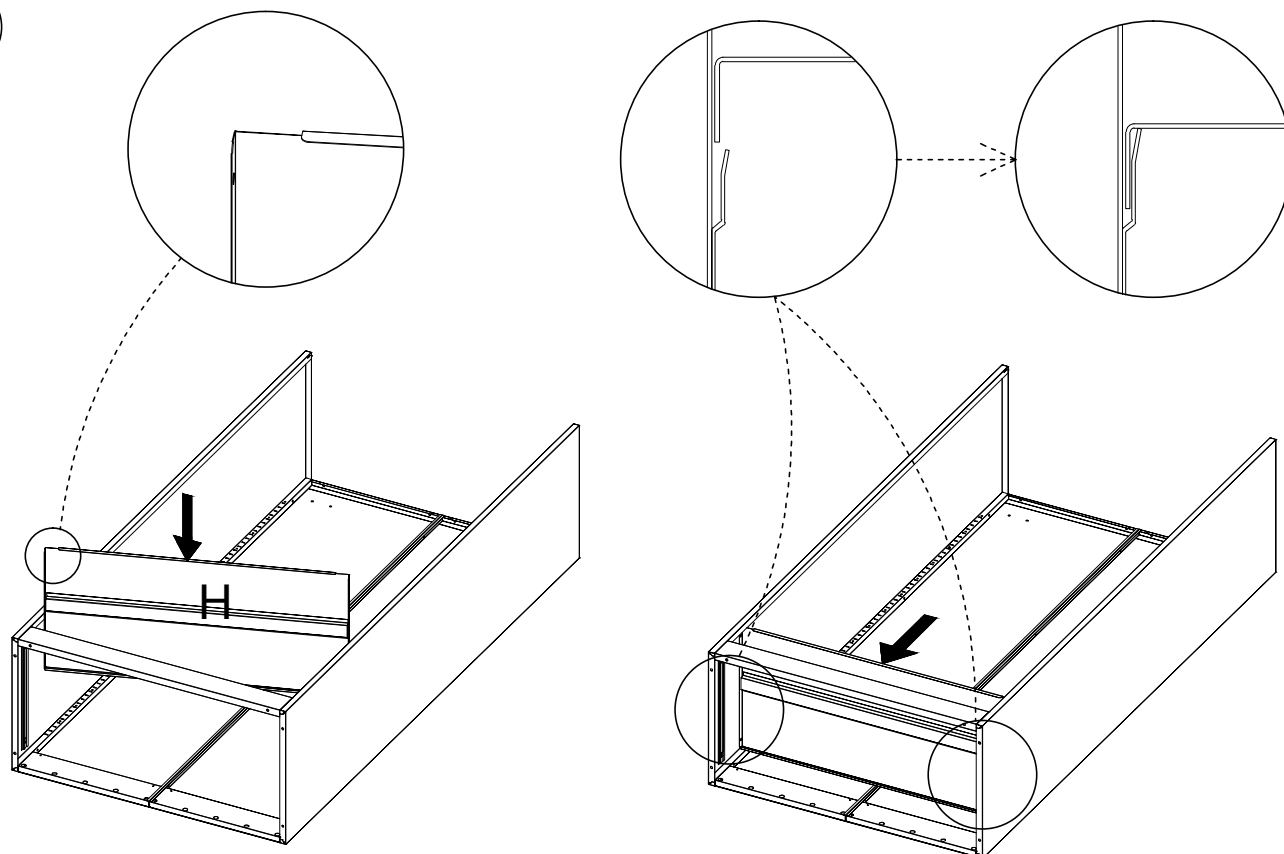


5

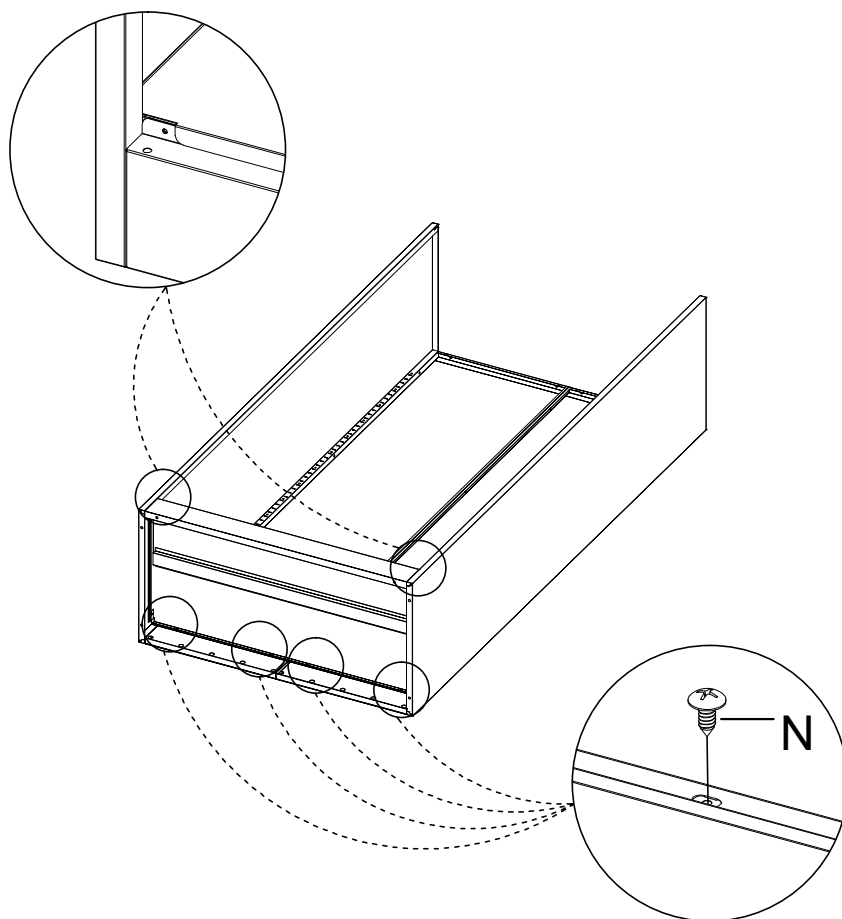 


N×4

 6

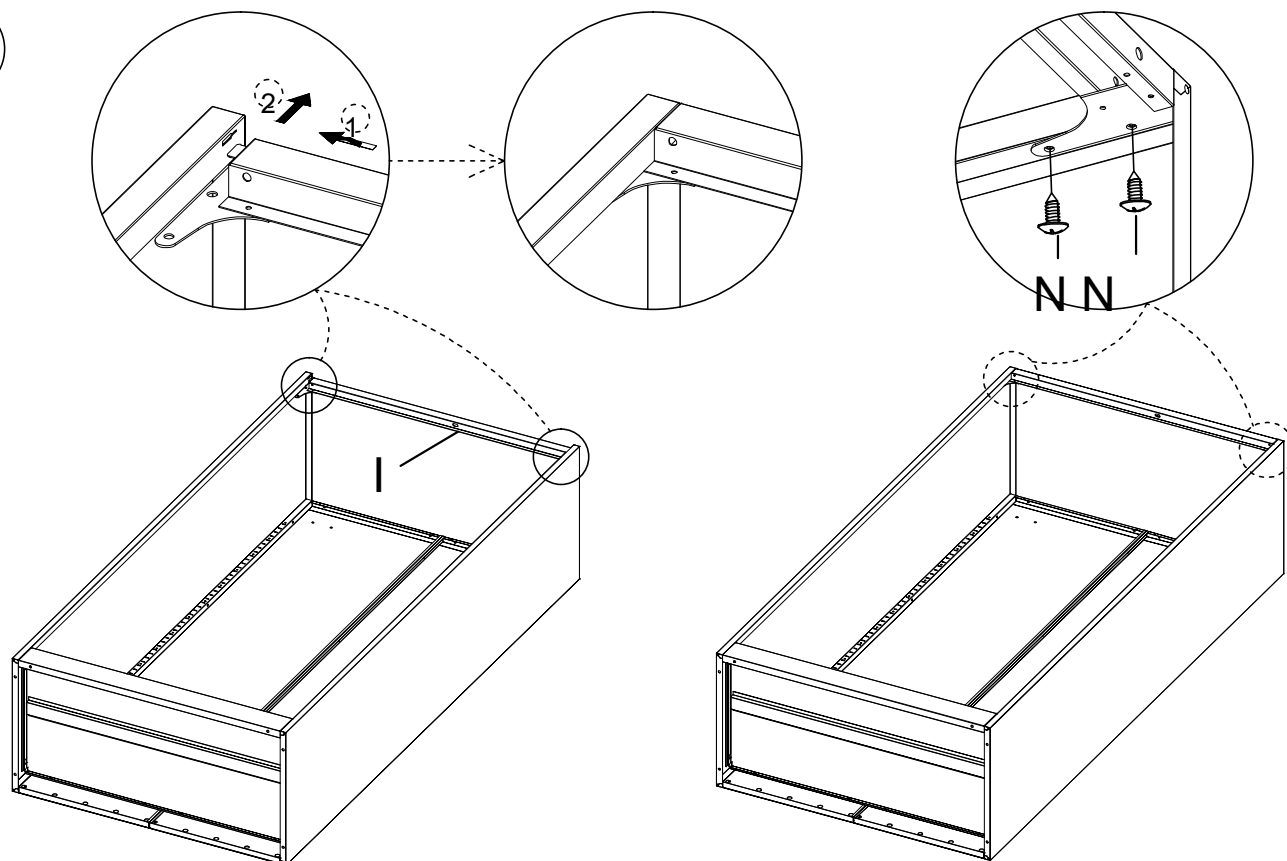


N×4

 7

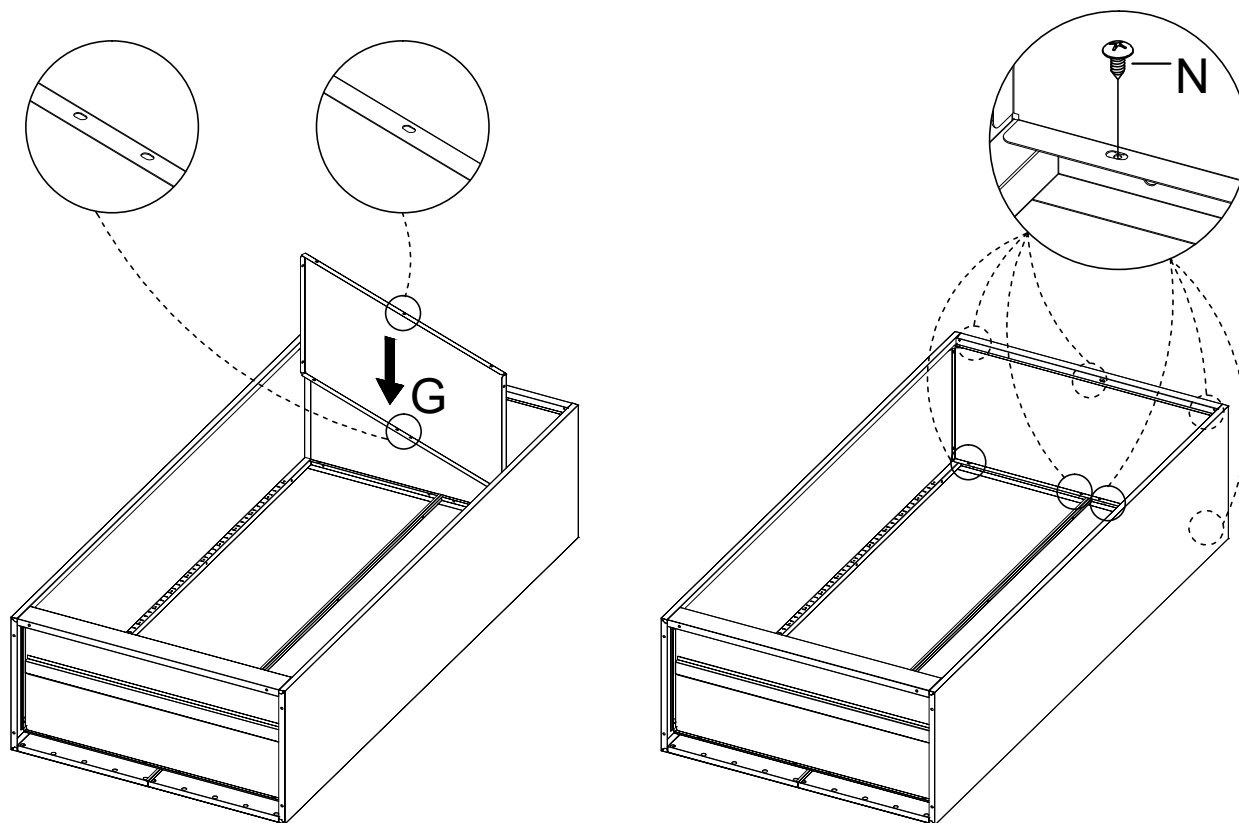


N×7

 8

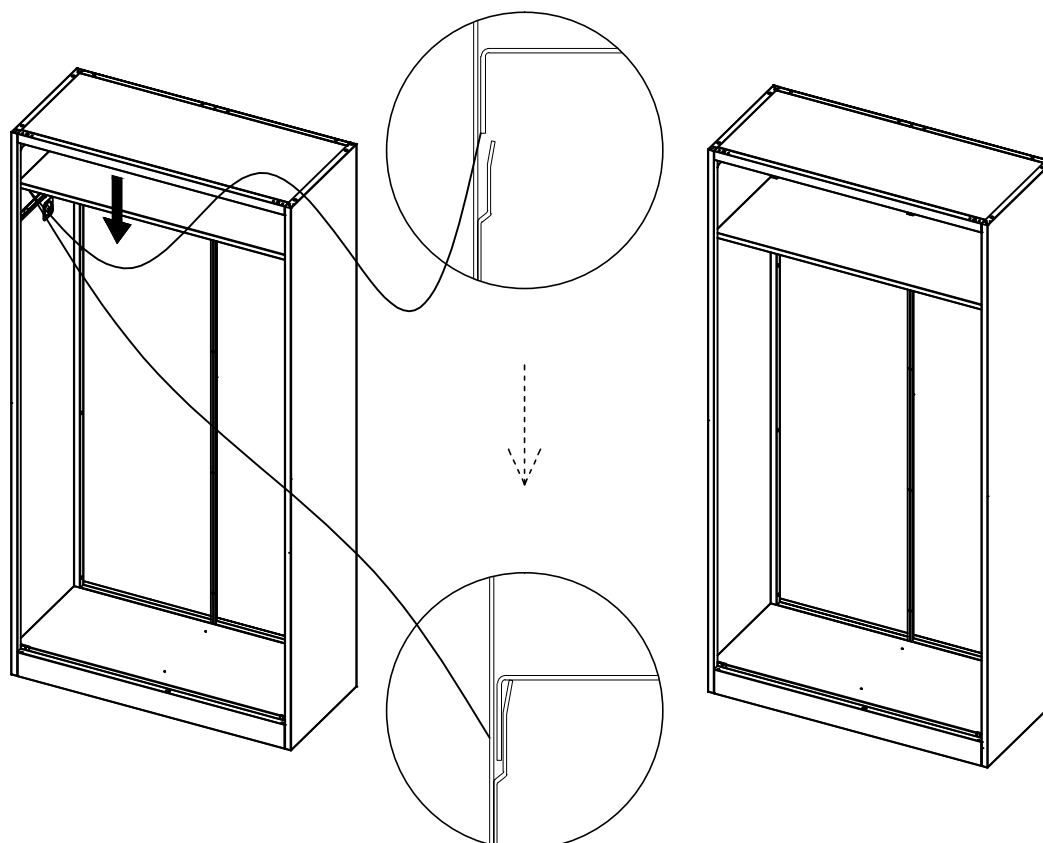


9

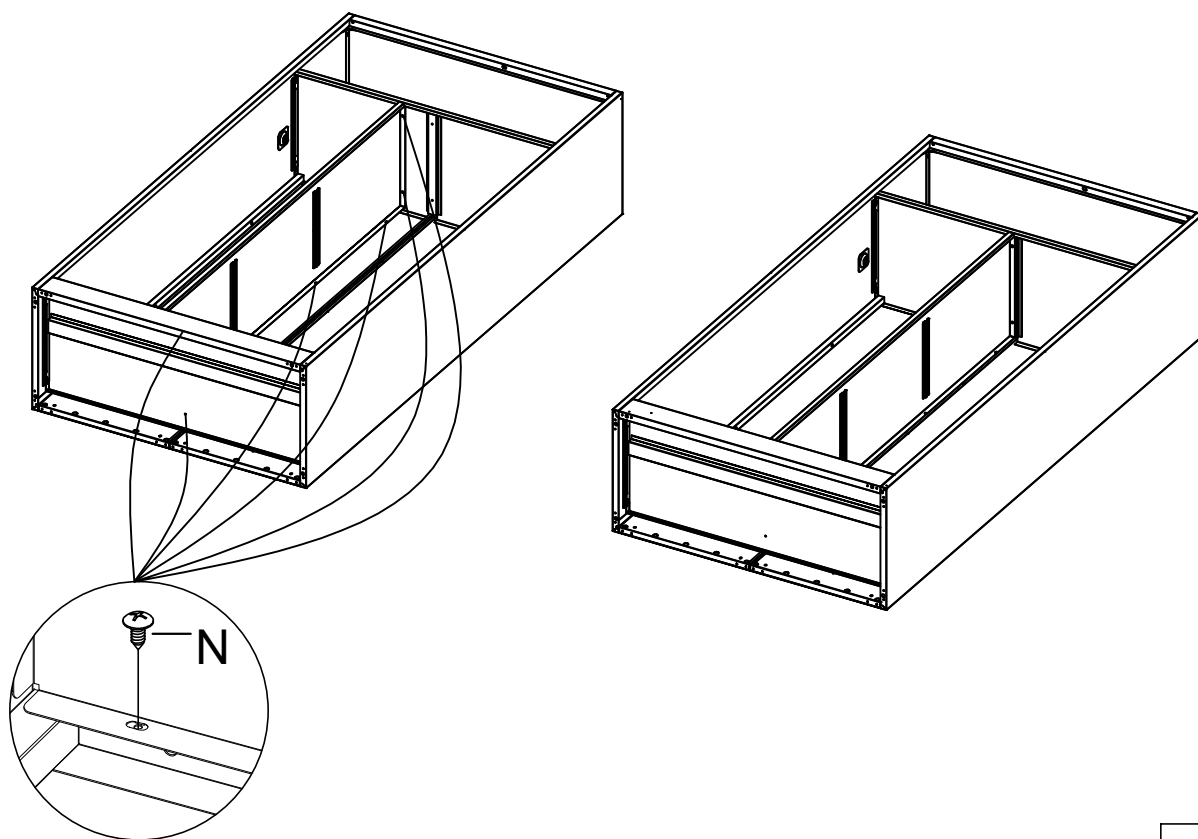 



N×8

 10

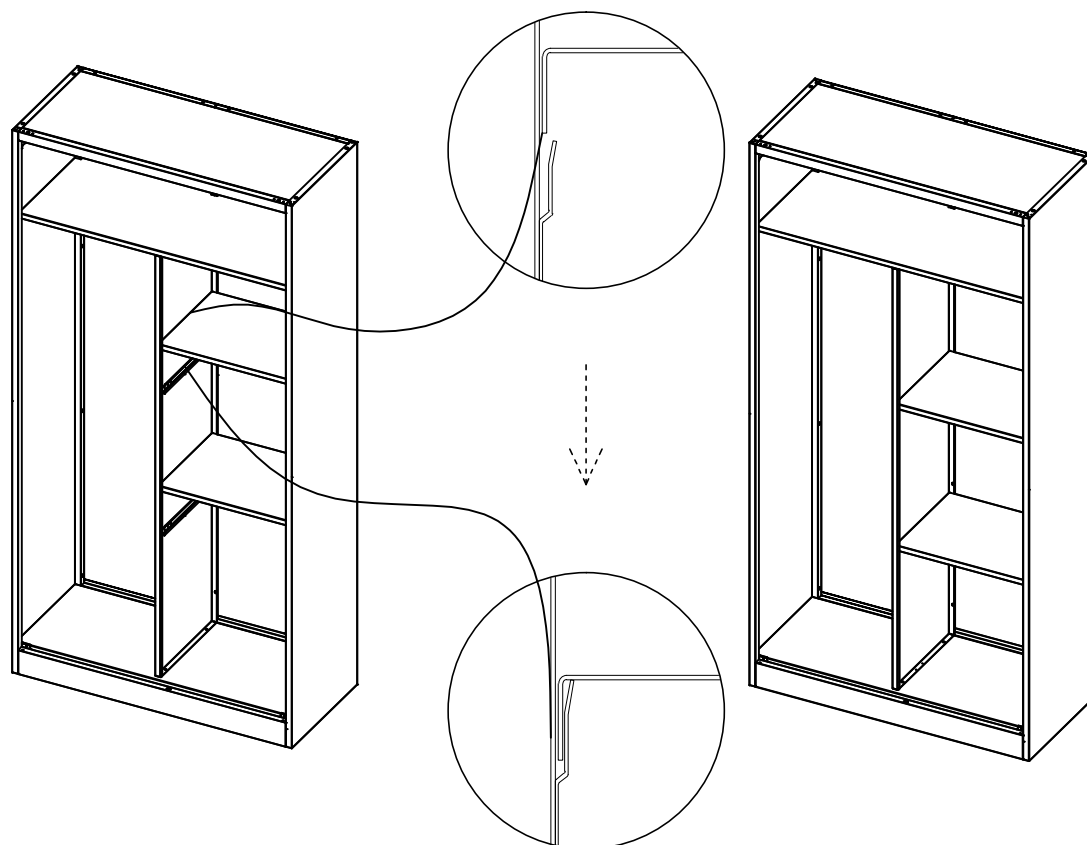



11

  If the spring shaft is lost, spare parts U can be used.

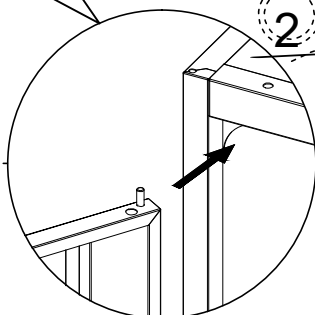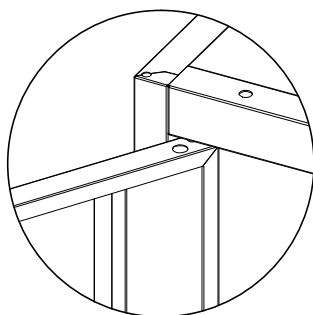


2

  F

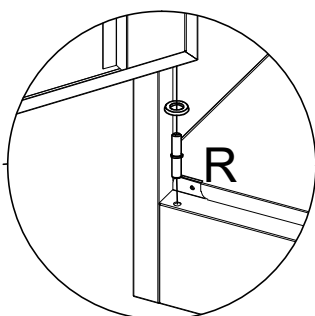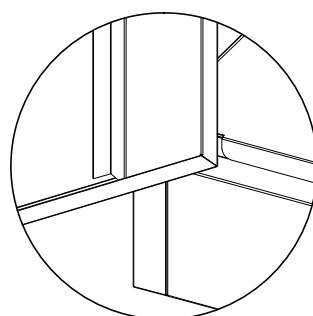

1

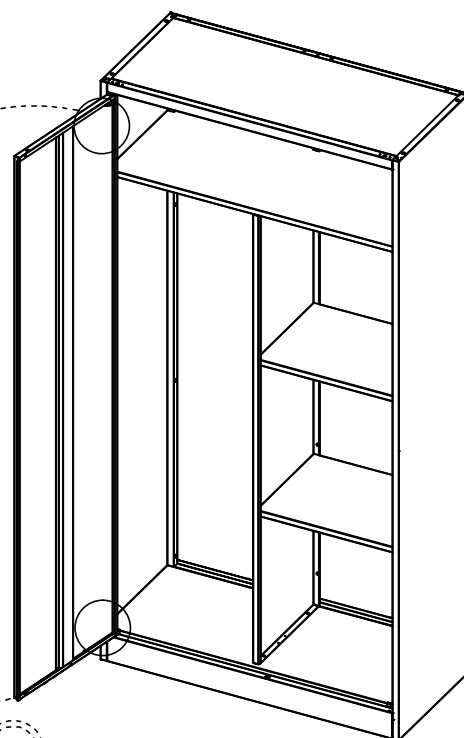 

R×1

 
 
S×2

12

If the spring shaft is lost, spare parts U can be used.





2

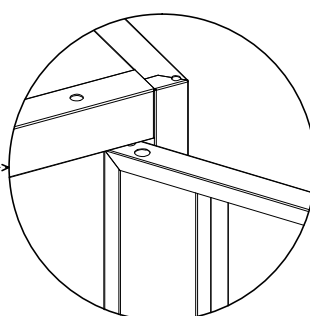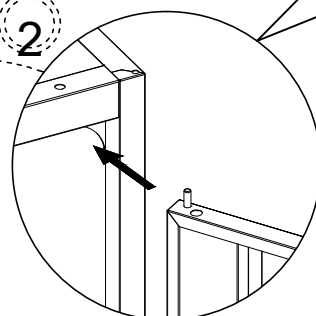


E

  S

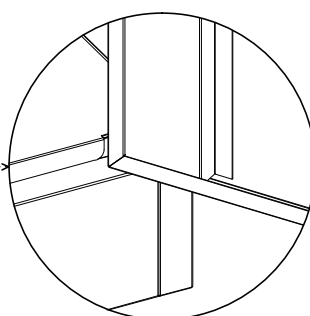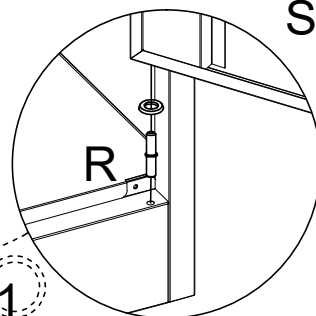



1

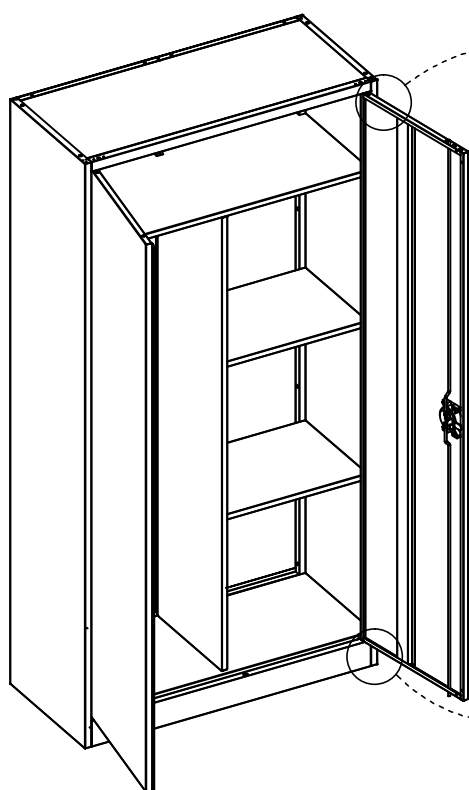 

R×1


S×2

  13

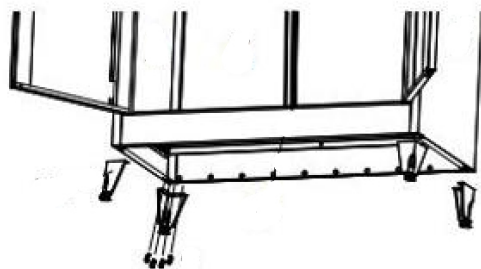
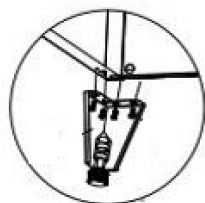


N×16

 14

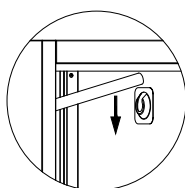

The key is here

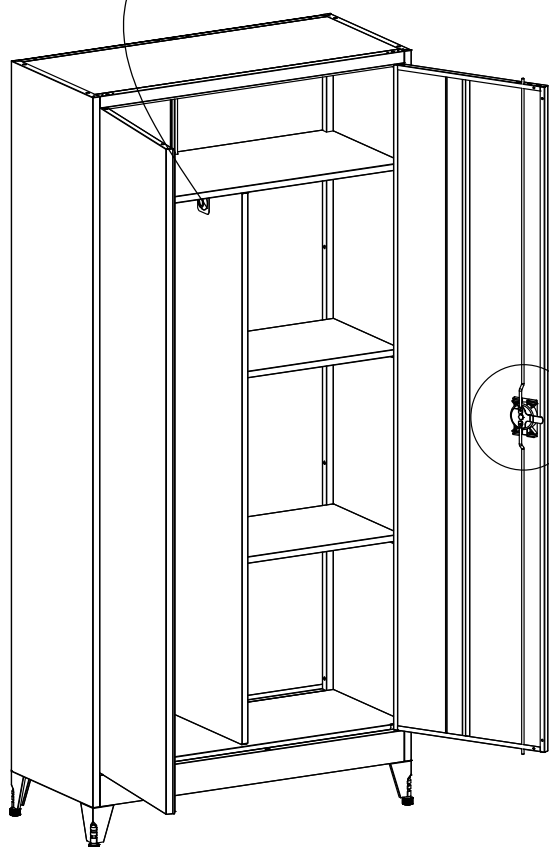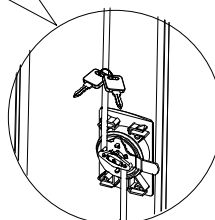  

Q×1